



OctoDome

Before assembling your OctoDome softbox, make sure all components are present. You will need:

- OctoDome softbox
- Starlite OctoConnector (or OctoConnector to fit your strobe light) not included
- Eight rods
- Rear cowling patch
- Inner baffle
- Front diffuser

Note: In most cases, the softbox connector is designed to connect with your light head in the same manner as your light head's accessories. If using a strobe light, make sure your OctoConnector is the correct one designed for your light.

1. Place softbox with all four rods into their sleeves on a flat, clean surface with all 8 rods installed. Undo all Velcro® Quick Release flaps (see Figure 6).
2. Notice that the connector has nine receptacle holes will be used. **NOTE:** Photoflex rectangular softboxes use only four of these receptacle holes. Position connector at the center of the softbox. The connector front (with the rounded screw heads) should face away from the softbox and the connector back (with the bolt nuts) should face into the softbox.

Inserting rods into the connector

Notice that each corner of the connector has a rod and receptacle hole. Follow the order shown in the preceding image when connecting rods to the connector. **NOTE:** you will insert one rod into a tapped hole.

3. Position the connector at the center of the OctoDome. Insert the first rod.
4. Insert the second rod into the hole diagonally opposite the first hole. Insert the third through eighth rods following the order of the diagrammed image above.
5. Use one hand to pull QRC flap over rod tip while pushing the rod into place with your thumb.
6. Secure each flap to its Velcro® counterpart. Repeat this process for the remaining corners.

NOTE: For proper dome shape to be achieved all rods must be pushed in completely.



Figure 1.

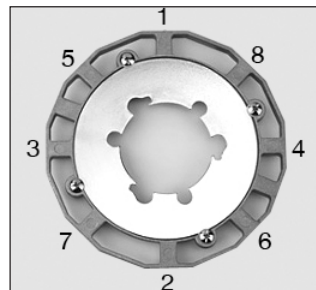


Figure 2.



Figure 3.



Figure 4.



Figure 5.



Figure 6.



Figure 7.



Figure 8.



Figure 9.



Figure 10.



Figure 11.



Figure 12.



Figure 13.



Figure 14.

Available Accessories

- Softbox Grids
Item# AC-ODGRID XS and S
- Shoemount Flash Hardware
- Wide range of strobe connectors to fit all major brand lights.
Item #AC-B222SM

Rear Cowling

7. Position the rear cowling patch over the corresponding Velcro®.
8. Press the cowling in place on the rear of the softbox.
9. The softbox is built and ready to attach to your light head. Place the dome face down on the floor with the connector facing up, then securely lock the light onto the connector. Make sure to always tighten the light fixtures set screw to the stud on the Litestand. Securely tighten the tilt bracket on the light to keep it from falling down.

Inner Baffle

10. The inner baffle has Velcro® tabs at each corner. These tabs connect the Velcro® loops on each inner seam of the OctoDome.
11. Attach all the Velcro® tabs.
12. The baffle is now installed.

Face Diffuser

13. The face diffuser is rimmed with Velcro® that attaches to its counterpart lining the front of the OctoDome.

Note: The face diffuser should attach approximately 1" 2.5cm below the outer edge of the OctoDome to allow room for adding the grids accessory if needed.

14. Starting at any corner, press the face diffuser in place. Work your way around the rim of the softbox until the diffuser is in place.

Warning: Do not leave lights unattended when not in use, as this can create a hazardous situation.

PHOTOFLEX® WARRANTY

- Warranties only cover manufacturer's defects and workmanship
- We reserve the right to inspect all merchandise returned (end users and dealers) for warranty fulfillment.
- All returns must be accompanied by a receipt showing date of purchase.
- Freight must be paid by the customer or dealer.
- Warranties are valid only from date of Original Purchase.

Customer Support (800) 486-2674
email: sales@photoflex.com

Corporate Office (831) 786-1370 • FAX (831) 786-1372
97 Hangar Way, Watsonville, CA 95076