



Company: REDROCK MICRO


Pages: 1 of 1

Title: ultra Field Cinema Bundle DSLR SETUP GUIDE



Scene: ultra Field Cinema BASIC and DELUXE Bundles

Date: 04.01.12


### ultra Field Cinema BASIC Bundle Components

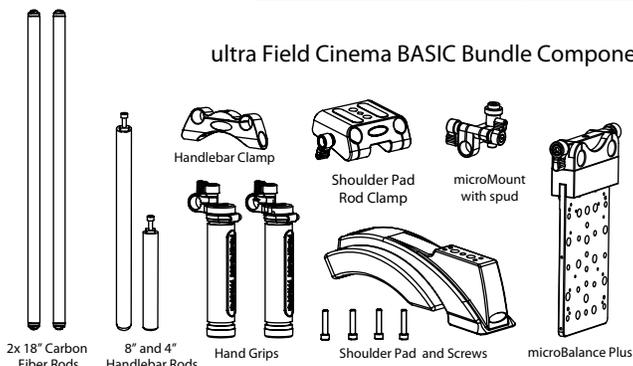



### ultra Field Cinema Additional Options

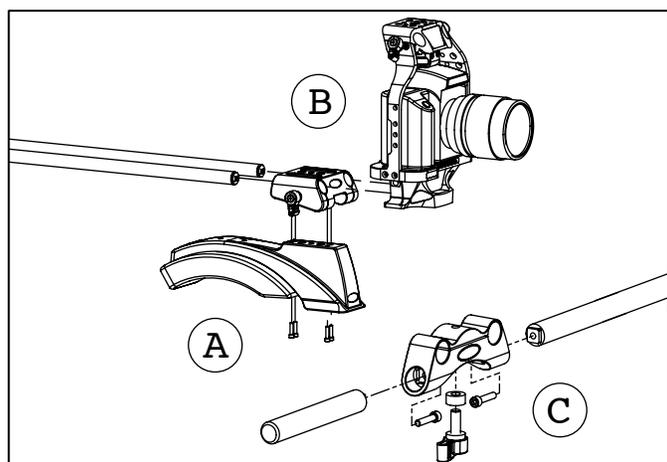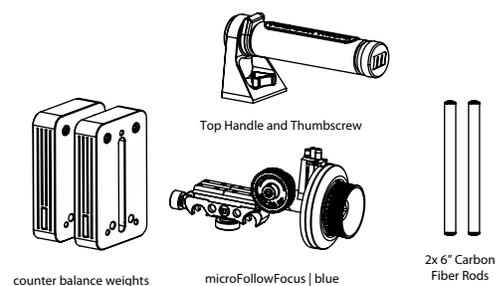

A: Attach Shoulder Pad to Rod Clamp using provided screws.  
B: Insert both 18" Rods into Rod Clamp, then into ultraCage.  
C: Remove blue knob from Handlebar Clamp. Attach 4" and 8" rods to Handlebar Clamp as shown. Replace blue knob.

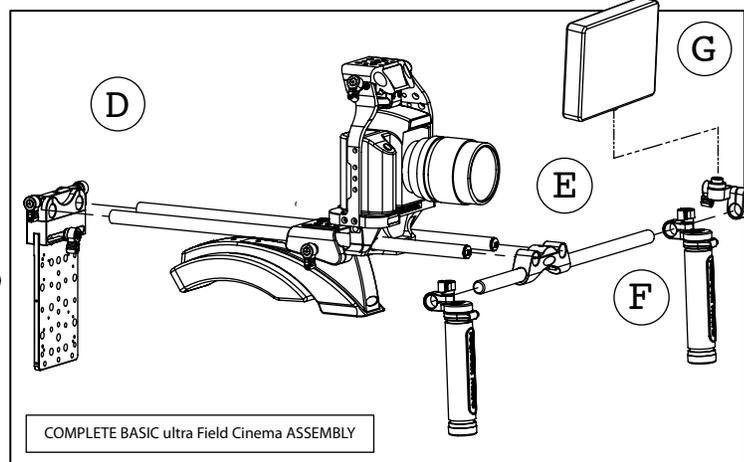

D: Add microBalance Plus to rig.  
E: Add assembled Handlebar to rig.  
F: Add blue Handgrips and microMount to Handlebar rods.  
G: Add external monitor (not included) to microMount.

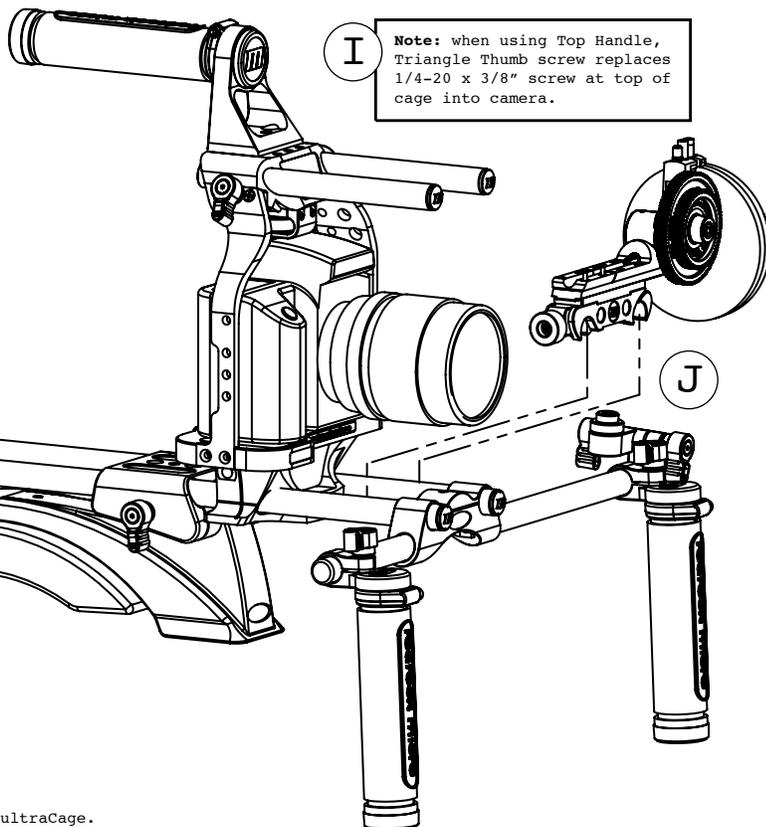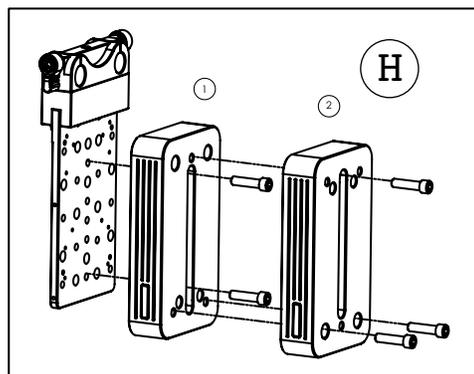

I Note: when using Top Handle, Triangle Thumb screw replaces 1/4-20 x 3/8" screw at top of cage into camera.

### ADDITIONAL OPTIONS

H: Attach Add-On Weights to microBalance Plus.  
I: Attach Top Handle (see above note) and 6" Carbon Fiber Rods to top of ultraCage.  
J: Attach microFollowFocus | blue to rig and microLens Gear to camera lens.