



Company: REDROCK MICRO


Title: microShoulder Mount Assembly Guide

Scene: 35mm Adapter / Deluxe Bundle Assembly Instructions


Pages: 1 of 1

Date: 05.10.10

1 DELUXE BUNDLE ASSEMBLY

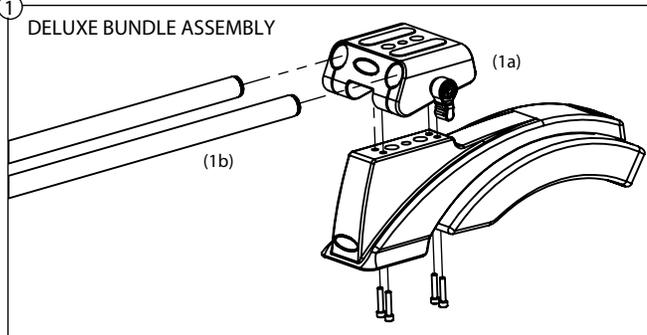

(1a) Attach rod clamp to shoulderPad
(2a) Add rods to rod clamp / shoulderPad assembly

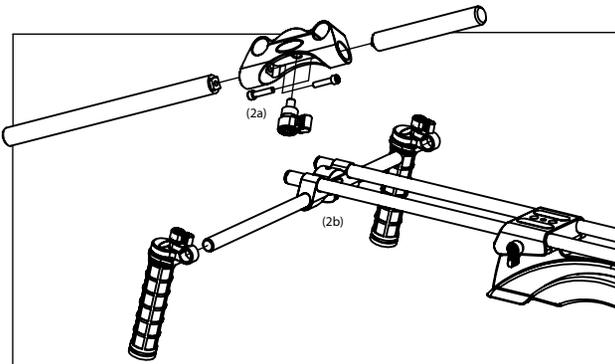


(2a) Attach rods to rigid mount using screws
(2b) Attach rigid mount assembly to existing rods and add hand grips


CAST REQUIRED:



microShoulder Clamp

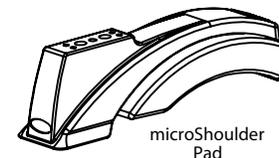

microShoulder Pad

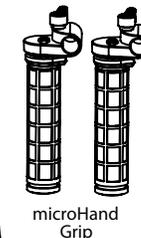

microHand Grip




Handlebar Clamp




Hardware Kit (wrenches, screws, ect)




Handle Bar Rods

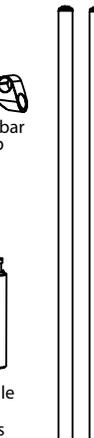


18in Carbon Rods (Deluxe Bundle Only)

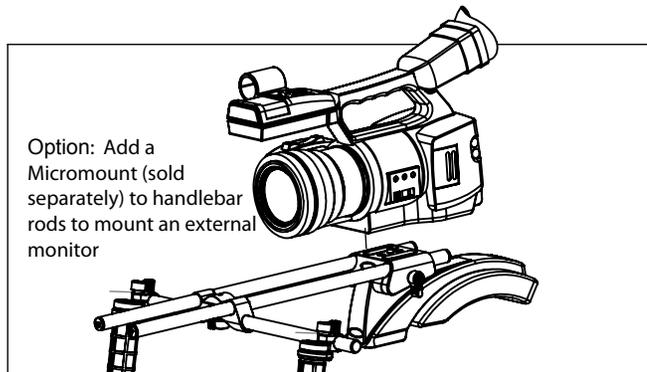


Deluxe Bundle Configuration Option 1: Attach camera to rod clamp / shoulderPad assembly using camera screw

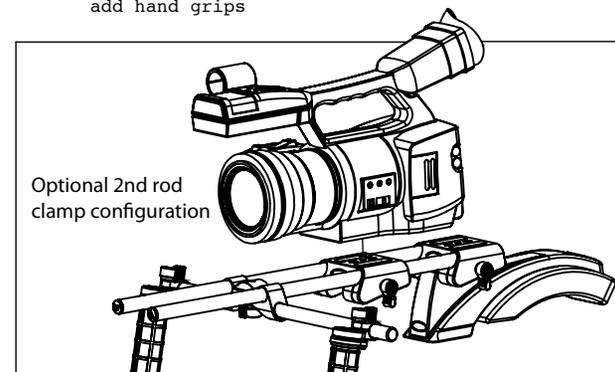


Deluxe Bundle Configuration Option 2: Attach camera to 2nd rod clamp. This configuration allows you to use the onboard LCD on your camera. (2nd Rod Clamp sold separately)

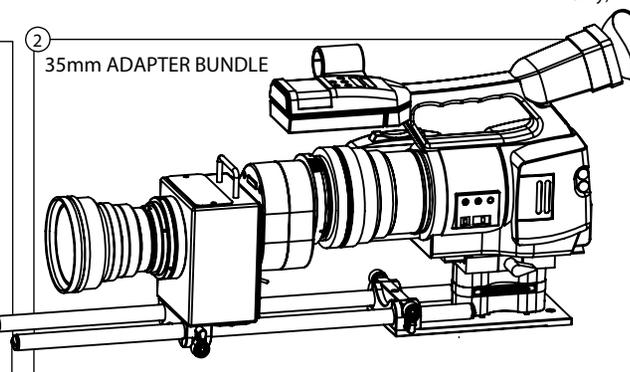


35mm ADAPTER BUNDLE is used with your existing rod support system

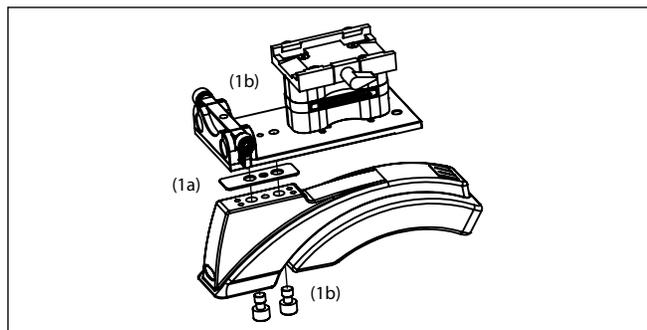

(1a) Add adhesive pad to top of shoulder pad (this is the rubber one with three holes for the threads)
(1b) Attach shoulderPad to existing baseplate using threads

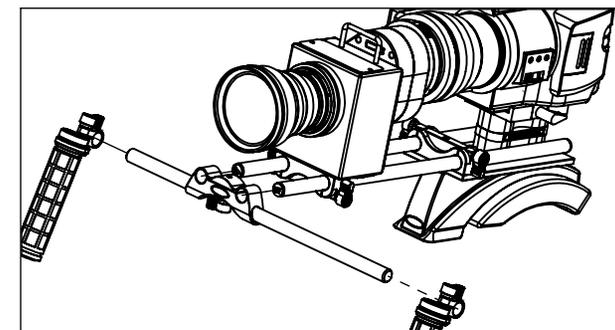

(2) Add rigid mount and hangrips to existing rods

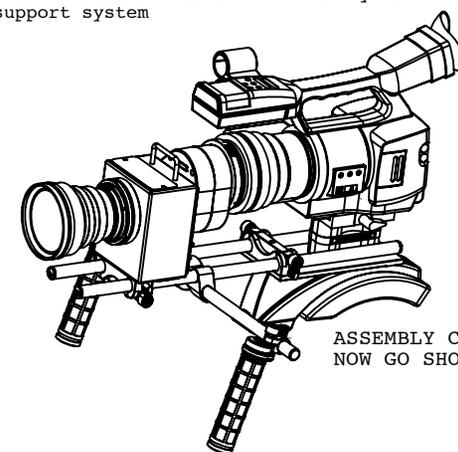

ASSEMBLY COMPLETED NOW GO SHOOT!