


rePLAY TM XD

LIFE'S IN HD... **REPLAY** IT.



USER GUIDE

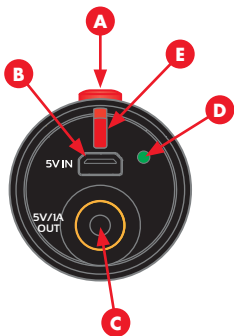

Replay XD RePower 2200 mAh Battery Pack

(A) Power On/Off

(B) Mini USB 8-pin connector

DC 5V Input


(C) 2.5mm threaded DC jack

DC 5V 1A Output

(D) Charging blue, green, red LED

(E) Power On/Off LED


ORIENTATION

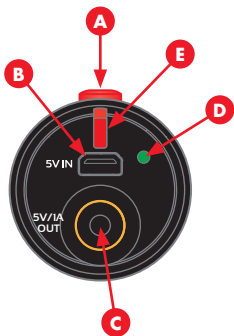

1. Make sure the Power (A) is off.
2. Plug a Replay XD1080 Mini USB 8-pin cable into the RePower 2200 5V IN USB port (B).
3. Plug the opposite end into a Replay XD power adapter, car charger, or a PC/Mac USB 2.0 port.
4. The battery status LED will illuminate and cycle through blue, green, and red (D) to tell you it's charging.
5. The battery status LED (D) will illuminate solid blue when the battery is full and charging is complete.


Note: The Mini USB port is for charging only. Do not power on during charging.

CHARGING

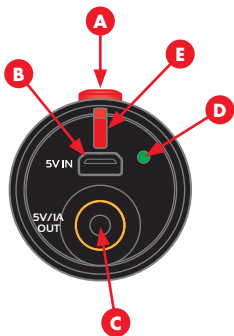

1. Insert the male 2.5mm threaded DC jack from one of the Replay XD DC HW Battery kits into the DC 5V 1A Output port (C) and gently screw it on and tighten lightly.
2. Make sure the other side of the HW Battery kit is securely attached to your camera.
3. Press the Power button (A) to turn on the RePower 2200 battery pack, the Power LED (E) will illuminate and provide power to your camera.

OPERATION

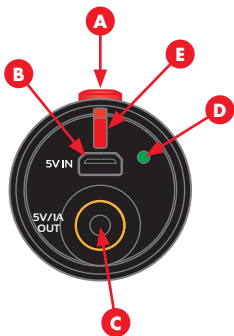

1. When the RePower 2200 is powered on, the charge status LED (D) will illuminate.
BLUE - FULL 100% Charge
GREEN - 50% Charge or less
RED - 10% Charge or less

POWER STATUS

RePOWER **2200**

Replay XD RePower 2200 mAh Battery Pack

OUTPUT POWER: DC 5V / 1A

BATTERY TYPE: Li-ion cell 18650-2200 mAh

CHARGE VOLTAGE: 5V

CHARGE CURRENT: 1A

CHARGE INPUT: Mini USB 8-pin connector

DC OUTPUT: 2.5mm threaded DC jack

CONTROL KEY: Power Button

LED INDICATOR: Power LED

Battery Level LED

DIMENSIONS: 24 mm Dia. (0.94 in)

97.5 mm Length (3.8 in)

22.9 mm Mounting Dia. (0.90 in)

WEIGHT: 76 grams (2.6 oz)

SPECIFICATIONS

IMPORTANT SAFETY AND HANDLING INFORMATION

WARNING: Failure to follow these safety instructions could result in fire, electric shock, or other injury or damage to the Replay XD RePower 2200 battery or other property.

Handling

The Replay XD RePower 2200 battery contains sensitive components. Do not drop, disassemble, open, crush, bend, deform, puncture, shred, microwave, incinerate, paint, or insert foreign objects into the Replay XD RePower 2200 battery. Do not use the Replay XD RePower 2200 battery if it has been damaged—for example, if Replay XD RePower 2200 battery is cracked, punctured, or damaged by water.

Avoiding Wet Locations

Do not use the Replay XD RePower 2200 battery in rain, or near wash basins or other wet locations. Take care not to spill any food or liquid on the Replay XD RePower 2200 battery. In case the Replay XD RePower 2200 battery gets wet, turn off and unplug from camera before cleaning, and allow it to dry thoroughly before using again. Do not attempt to dry the Replay XD RePower 2200 battery with an external heat source, such as a microwave oven or hair dryer. Damage to the Replay XD RePower 2200 battery caused by contact with liquid is not covered under the warranty.

Using Connectors and Ports

Never force a connector into a port. Check for obstructions on the port. If the connector and port don't join with reasonable ease, they probably don't match. Make sure that the connector matches the port and that you have positioned the connector correctly in relation to the port.

This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling in your country. For more information, please contact the local authority or your retailer where you purchased the product.



STABLE IMAGING SOLUTIONS, LLC. LIMITED WARRANTY

WHAT THE WARRANTY COVERS

Stable Imaging Solutions, LLC. (SIS) warrants for 180 days from the date of purchase of product it will be free from defects in material and workmanship.

WHAT IT DOES NOT COVER

This warranty does not cover damage due to:

- Accidents of any kind
- Exposure to pressure, extreme temperatures (outside of -20°C to 45°C), and submersion in water. This product is not water resistant or waterproof, it is shock resistant but not shock proof, and its performance can be hindered in extreme temperatures.
- Installation and operation contrary to the instructions which come with the product, including misuse ,abuse, and negligence.
- Cosmetic damage.
- Modification of or to any part of the product.

This warranty does not cover any product for which the factory applied serial number has been altered or removed or any damage due to improper maintenance. This warranty is valid in any countries SIS sells the product or is legally represented. SIS reserves the right to determine if the product is within the guidelines of this warranty. SIS, at its sole discretion may service, repair, or replace this product after determining the cause of failure. For Returns: Original sales receipt must be produced for any warranty service, and a Return Merchandise Authorization (RMA) number must be obtained from customer service at 1-805-480-9800 prior to returning product. Products will not be accepted without an RMA.

EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY. REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER, SIS SHALL NOT BE LIABLE FOR ANY INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY KIND CAUSED BY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT.

WARRANTY

STABLE IMAGING SOLUTIONS, LLC. DISCLAIMER

All purchasers, users, and any or all parties involved or engaging in the use of Stable Imaging Solutions, LLC. ("SIS") products agree to the following:

- SIS does not promote or endorse careless and or dangerous actions when using its products.
- SIS is not liable for any use or misuse of SIS products in applications other than those for which it was designed.
- SIS does not take any responsibility in relation to the use of our products or any video captured that may be considered illegal.
- SIS is not responsible for any illegal actions taken while recording, attempting to record, or editing video that was captured with our products.
- SIS products primary purpose is for recording legal action sports or any other activities as seen by all Local, State, Federal, and Country laws.
- SIS camera accessories, including mounts, lanyards and other accessory items are provided as attachment options and are sold as is. They must be used with extreme caution and care when the camera is mounted to a helmet, person, or any kind of property during any activity in the event that it comes loose or stays put in which it could cause harm, injury, or death.
- SIS is indemnified from consequential or indirect loss, damage, injury, or death resulting from the use of SIS products.
- All trademarks and registered trademarks mentioned herein are recognized as the property of their respective holders.

Replay XD®, Replay XD RePower 2200 is a product of Stable Imaging Solutions, LLC. in California.

www.Replayxd.com

©2012 Stable Imaging Solutions, LLC., Replay XD® All rights reserved.

DISCLAIMER

FCC Compliance Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Radio and TV Interference This equipment has been tested and found to comply with the limits for a Class B digital device in accordance with the specifications in Part 15 of FCC rules. These specifications are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the manufacturer's instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for help.

The supplied interface cable must be used with the equipment in order to comply with the limits for a digital device pursuant to Subpart B of Part 15 of FCC Rules.

Canadian ICES-003 Statement

This Class B digital apparatus complies with Canadian ICES-003.

RoHS

This device complies with European Union's ROHS directive 2002/95/EC and similar regulations that may be adopted by other European countries for European Sales.

CE Certified

COMPLIANCE



*LIFE'S IN HD... **REPLAY** IT.*

Replay XD a fine brand of Stable Imaging Solutions, LLC.

Sales & Technical Support:

Phone: 1-805-480-9800

Sales: sales@replayxd.com

Support: support@replayxd.com

Office & Administration:

Monday–Friday, 8am–5pm (PST)

Corporate Address:

Stable Imaging Solutions, LLC.

3709 Old Conejo Road

Newbury Park, CA 91320

REV. 2012.4.1.0

WWW.REPLAYXD.COM