

P360

Portable LED Light


User Manual

Table of Contents


What's In The Box	1
Getting To Know The Light	2
Set Up And Basic Operation	4
Optional Accessories	6
Filters/Diffuser/Umbrella/Softbox	
Specifications	7
For Your Safety	7
Warranty	8

What's In The Box


- P360 Light

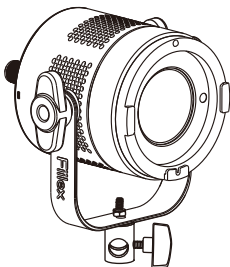

- 4 Leaf Barndoor

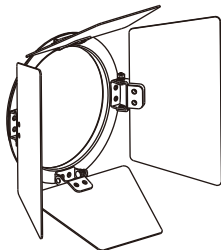


- Power Supply

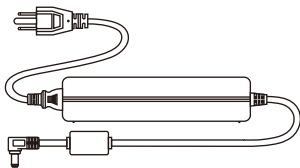


- User Manual


Getting To Know The Light

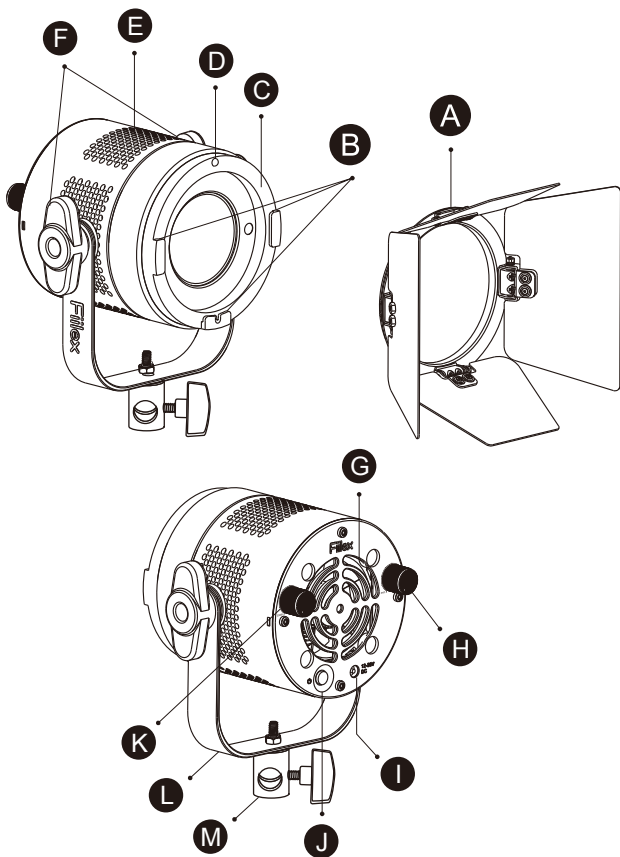

- A 4 Leaf Barndoor
- B Barndoor Slot
- C Barndoor Holder
- D Barndoor Fix Ball
- E Side Air Vents
- F Yoke Knob
- G Back Air Vents
- H Intensity Knob
- I DC Power Input Jack
- J On/ Off Switch
- K CCT Tuning Knob (3000K - 5600K)
- L Yoke
- M Light Stand Adapter

Set Up And Basic Operation

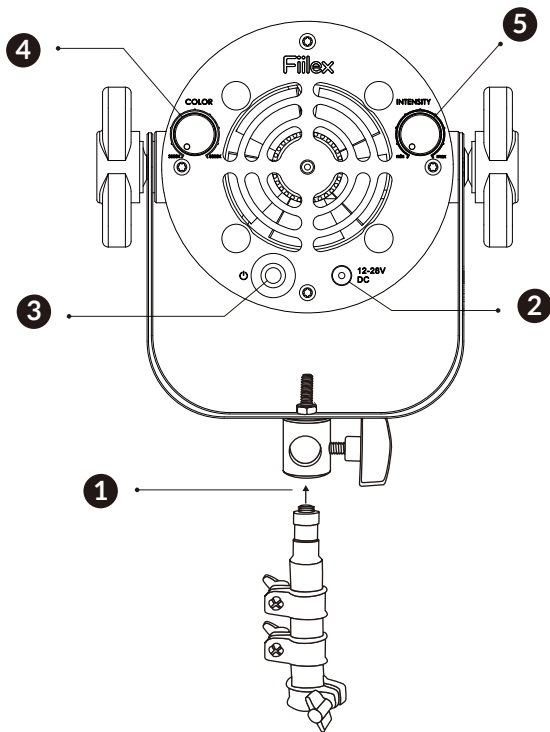

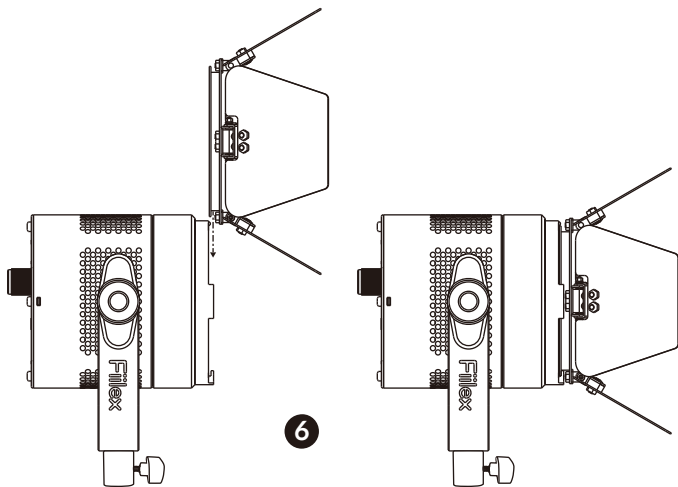

- 1 Mount Light Stand Adapter(M) to spigot on light stand or tripod.
- 2 Insert the DC power plug into DC Power Input Jack (I).
- 3 Press On/Off button (J) to turn on P360 .
- 4 Adjust the color temperature with CCT Tuning Knob (K).
- 5 Adjust the Intensity with Intensity Knob (H).
- 6 Insert Barndoor along with the Barndoor Slot (B) until clicking into place.


Filters

(Optional Accessory)




Diffuser

(Optional Accessory)

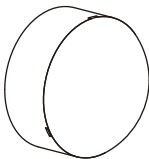


Umbrella Holder

(Optional Accessory)

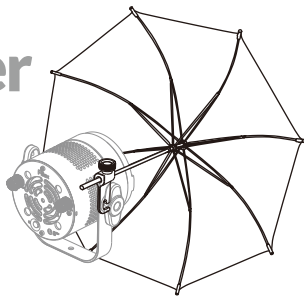

Softbox

(Optional Accessory)

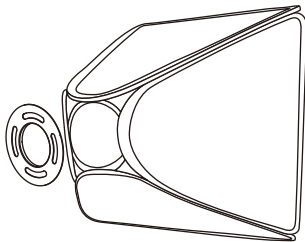

See website for additional accessories. www.fiilex.com

Specifications

Size (without Barndoor)	4" (Diameter) x 4.7" (Length)
Weight (Includes Yoke)	1.6 lb / 0.74 kg
LED	Dense Matrix LED
Thermal Design	Advanced Vapor Cooling System
CCT Range	Continuous from 3000K to 5600K
CRI	>92
Power Consumption	90W Max.
Input	12 to 28 V DC
AC Adaptor	100-240VAC, 50/60Hz (In) / 24V DC, 90W max. (Out)
Operating Temperature	0 to 40 °C

For Your Safety

- Do not attempt to disassemble the body of P360.
- Do not install P360 in a damp or wet area.
- Do not cover the side and back air vents.
- Use only the included power supply.
Failure to do so may cause damage to the LED light.
- Use only a soft, dry towel to gently clean the exterior of the light.
- Before turning on the power, please make sure the Protective Cap (B) and protective membranes are removed.

2 Year Limited Warranty

Unless otherwise stated, your product is covered by a two year parts and labor limited warranty. Fiilex guarantees, to the original buyer, all of its products to be free from defects in both workmanship and material for a period of two years from the date of purchase. This warranty extends to all products which have proved defective through normal use but excludes products that have been disassembled, modified or misused by the buyer or any other person. This warranty is in lieu of all other warranties, and disclaims all warranties expressed or implied, including any warranty of merchantability, fitness for a particular purpose, or arising from the course of dealing between the parties or usage of trade.

Returning an Item Under Warranty for Repair

It is necessary to obtain a Return Authorization Number (RA#) from your dealer/ point of purchase BEFORE any units are returned for repair. Fiilex will make the final determination as to whether or not the unit is covered by warranty. Fiilex will replace or repair to proper working condition any products that are returned under warranty. Products repaired or replaced under warranty are under warranty only for the remaining unexpired period of time of the original warranty.

Any Product unit or part returned to Fiilex must be packaged in a suitable manner to ensure the protection of such Product unit or parts. The package must be clearly and prominently marked to indicate that the package contains returned Product units or parts with a Return Authorization (RA#) number. All returned Product units or parts must be accompanied by a written explanation of the alleged problem or malfunction.

Fiilex.com

1689 Regatta Blvd, Richmond, CA 9480
(510)620-5154 . Fillex@Fillex.com



Information and Specifications in this document are subject to change without notice. DiCon Lighting, Inc. assumes no responsibility or liability for any error or inaccuracies that may appear in this manual. Unlawful reproduction or distribution in any manner without the written permission of DiCon Lighting, is strictly prohibited.

Fiilex™



Fiilex.com
