


impact™

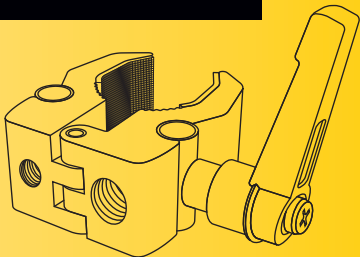

ME-100 ATOM CLAMP INSTRUCTIONS

Thank you for choosing Impact

Congratulations on the purchase of your new Impact Atom Clamp. The Impact Atom Clamp is ideal for mounting threaded accessories to poles and flat surfaces. Made of durable and light-weight aluminum with a textured non-slip rubber jaw grip, the Impact Atom Clamp also features an easily adjustable handle that may be repositioned without loosening or tightening the clamp.


Contents

- Atom Clamp
- One-Year Limited Warranty


Specifications

- Load capacity 7kg (15.4 lbs)
- Thread sizes 3/8" and 1/4"
- Fits round poles with diameters 15mm-35mm (.59"-1.37")
- Fits flat surfaces up to 35mm (1.37")
- Weight 106g (4 oz)


Mounting the Clamp

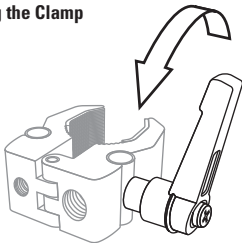

1. With the handle of the Atom Clamp facing you, loosen the clamp by turning the handle counterclockwise.

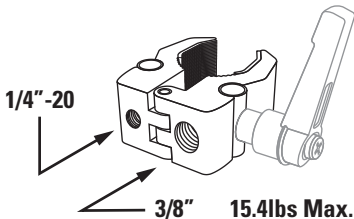


2. Identify the male thread on the item you wish to mount to the Atom Clamp, and match it up with the corresponding 3/8" or 1/4" female thread on the Atom Clamp. Mount the item by screwing it in clockwise until it is secure.

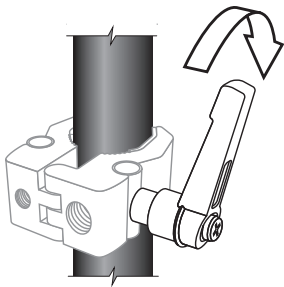

3. Set the jaw grip of the Atom Clamp around the surface to which you want to mount it, and tighten the clamp by turning the handle clockwise.

Repositioning the Handle

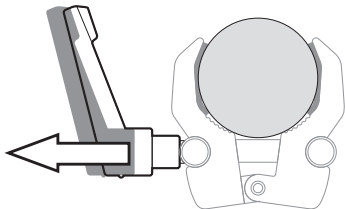

1. To reposition the handle without loosening or tightening the clamp, hold the body of the Atom Clamp steady with one hand.

2. Using your other hand to hold onto the base of the handle, pull the handle away from the body of the Atom Clamp.
3. While still pulling the handle away from the body of the clamp, rotate the handle to the desired position and then release.

Note: *Make sure everything is secure before proceeding.*

ONE-YEAR LIMITED WARRANTY

This IMPACT product is warranted to the original purchaser to be free from defects in materials and workmanship under normal consumer use for a period of one (1) year from the original purchase date or thirty (30) days after replacement, whichever occurs later. The warranty provider's responsibility with respect to this limited warranty shall be limited solely to repair or replacement, at the provider's discretion, of any product that fails during normal use of this product in its intended manner and in its intended environment. Inoperability of the product or part(s) shall be determined by the warranty provider. If the product has been discontinued, the warranty provider reserves the right to replace it with a model of equivalent quality and function.

This warranty does not cover damage or defect caused by misuse, neglect, accident, alteration, abuse, improper installation or maintenance. EXCEPT AS PROVIDED HEREIN, THE WARRANTY PROVIDER MAKES NEITHER ANY EXPRESS WARRANTIES NOR ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR

ONE-YEAR LIMITED WARRANTY *(cont.)*

A PARTICULAR PURPOSE. This warranty provides you with specific legal rights, and you may also have additional rights that vary from state to state.

To obtain warranty coverage, contact the Impact Customer Service Department to obtain a return merchandise authorization ("RMA") number, and return the defective product to Impact along with the RMA number and proof of purchase. Shipment of the defective product is at the purchaser's own risk and expense.

For more information, or to arrange service, visit www.impactstudioliighting.com or call Customer Service at 212-594-2353.

Impact is a Gradus Group Brand. Product warranty provided by the Gradus Group. www.gradusgroup.com

IMPACT is a registered trademark of the Gradus Group.
© 2014 Gradus Group LLC. All Rights Reserved