


Universal 2nd Tier Add-On

KST-1



Instructions

1. To unfold the 2nd tier, loosen the locking knob at the joint between the two parts of one arm and swing it open so that one part of the arm is at a 90° angle to the other part of the arm. Tighten the locking knob. Repeat for the other arm.

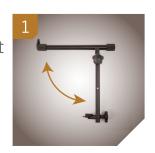

- Remove the end cap on one crossbar of your keyboard stand.
- 3. Loosen the expansion lock at the bottom of one arm of the 2nd tier add-on.



4. Insert the expansion lock all the way into the crossbar tubing with the disc locking knob on the joint oriented toward the outside of the stand.



- 5. Tighten the expansion lock until the arm is securely attached to the crossbar.
- 6. Repeat the process using the second arm of the 2nd tier add-on and the second crossbar of your stand with the locking knob positioned on the outside of the stand.



The angle of the 2nd tier add-on can be adjusted by loosening the locking knobs and moving the upper part of the arm to the desired position.

Specifications

Construction: 1" (25.4 mm) welded metal tubing

Dimensions: (W×H×D) 14.5" × 14" × 3.5" (36.8 × 35.5 × 8.9 cm)

Weight capacity: 60 lb. (27.27 kg)

Weight: 3.65 lb. (1.65 kg)

Box Contents

Auray KST-1 Universal 2nd Tier Add-On

Additional Support Arm

One-Year Limited Warranty

One-Year Limited Warranty

Auray provides a limited warranty to the original purchaser that this product is free from defects in materials and workmanship under normal consumer use for a period of one (1) year from the original purchase date or thirty (30) days after replacement, whichever occurs later. Auray's responsibility with respect to this limited warranty shall be limited solely to repair or replacement, at Auray's discretion, of any product that fails during normal consumer use. Inoperability of the product or part(s) shall be determined by Auray. If the product has been discontinued, we reserve the right to replace it with a model of equivalent quality and function.

To obtain warranty coverage, contact Auray to obtain a return merchandise authorization ("RMA") number, and return the defective product to Auray, along with the RMA number and proof of purchase. Shipment of the defective product is at the purchaser's own risk.

This warranty does not cover damage or defect caused by misuse, neglect, accident, alteration, abuse, improper installation or maintenance. EXCEPT AS PROVIDED HEREIN, AURAY MAKES NEITHER ANY EXPRESS WARRANTIES NOR ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. This warranty provides you with specific legal rights, and you may also have additional rights that vary from state to state.

