



Figure 1.



Figure 2.



Figure 3.



Figure 4.



Figure 5.



Figure 6.



Figure 7.



Figure 8.



Figure 9.

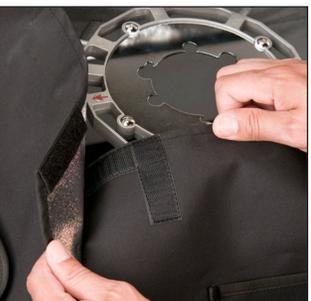


Figure 10.

SilverDome

Before assembling your SilverDome softbox, make sure all components are present. You will need:

- SilverDome softbox
- Connector for your specific light (not included)
- Four rods
- Inner baffle (medium, large, and x-large only)
- Front diffuser

Assemble the Softbox to the Connector

1. Place softbox with all four rods into their sleeves on a flat, clean surface.
2. If closed, open all four Quick Release Corners (QRC). Pull Velcro® tab open at each corner so that rods extend freely. (not available on Small SilverDome.)
3. Notice that the connector has nine receptacle holes, three of which are tapped. The SilverDome and other rectangular soft boxes use only four of these receptacle holes. (The remaining four holes are for use with the OctoDome, an eight rod soft box.)
4. Position connector at the center of the softbox. Insert the first rod into one of the rod receptacle holes)

NOTE: If you are planning on using the Shoe Mount hardware AC-B222SM with this assembly, make sure that one of the large tapped holes is centered between two inserted rods. The red arrows indicate the holes with 3/8" large tapped threads.

5. Insert the second rod into the hole diagonally opposite the first hole.
6. Insert the third and fourth rods.
- 7/8. Use one hand to pull QRC flap over rod tip while pushing the rod into place with your thumb
9. Secure flap to its Velcro® counterpart. Repeat this process for the remaining corners.
10. The rear flaps close by pulling flaps toward the connector and attaching with the Velcro® sewn onto each flap.

NOTE: For proper dome shape to be achieved all rods must be pushed in completely.

Connecting the SilverDome to a Light head

NOTE: If using the StarLite head, see assembly instructions on the StarLite page.

NOTE: In most cases, the softbox connector is designed to connect with your light head in the same manner as your light head's accessories.



Figure 11.



Figure 12.



Figure 13.



Figure 14.



Figure 15.



Figure 16.



Figure 17.



Figure 18.



Figure 19.

11/12. Connect the light to the softbox connector.

13. Carefully lift the softbox and light assembly and position over the LiteStand. Line up the LiteStand's riser (stud) with the stand receptacle hole on the light head. Place the light head on the LiteStand. Tighten the set screws on your lights swivel to secure to the LiteStand and prevent unwanted tilt.

14. The inner baffle has elastic bands with metal clips at each of the four corners. The interior of the SilverDome softbox has four white nylon loops. Secure one metal clip to each of these loops.

15. Inner baffle correctly installed in place.

16. The face diffuser is rimmed with Velcro® that attaches to its counterpart lining the front of the SilverDome.

17. Find the long edge of the diffuser and line up with the long edge of the SilverDome front. Starting at one corner, press the face diffuser in place.

18. Work your way around the rim of the softbox until the diffuser is in place.

19. The SilverDome has heat vent flaps on all four sides. For proper ventilation and to prolong the life of your Silver Dome, it is recommended that you open up the top (facing ceiling) vent and bottom (facing floor). This will create a convection flow of air through the softbox interior.

20. To prevent unwanted light spill out of the vent, the vent can be tented in a dome shape to allow air flow.



Figure 20.

PHOTOFLEX® WARRANTY

- Warranties only cover manufacturer's defects and workmanship
- We reserve the right to inspect all merchandise returned (end users and dealers) for warranty fulfillment.
- All returns must be accompanied by a receipt showing date of purchase.
- Freight must be paid by the customer or dealer.
- Warranties are valid only from date of Original Purchase.

Customer Support (800) 486-2674

email: sales@photoflex.com

Corporate Office (831) 786-1370 • FAX (831) 786-1371
97 Hangar Way, Watsonville, CA 95076